

1. Introduction

Thank you for purchasing PLANET XGS3-PWR-AC 500-watt 100~240V AC Redundant Power Supply Unit for XGS3-42000R

2. Physical Description

Front panel

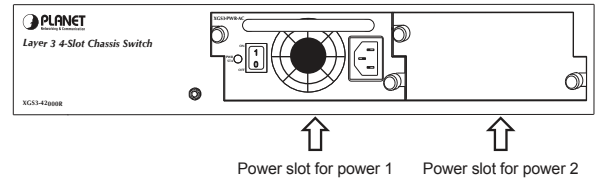


Figure 1. Power slots of XGS3-42000R

- 1 -

- 2 -

3. Installing and removing the redundant power supply unit

Before installation, please be sure to read this user's manual carefully to complete machine installation. This manual shows how to quickly install and remove the XGS3-PWR-AC from the XGS3-42000R.

The XGS3-42000R is equipped with one 100~240V AC power supply unit that comes with the package. The XGS3-42000R provides one spare power supply slot for a redundant power supply unit. The XGS3-PWR-AC features a switchable input option of 100V/240V AC.

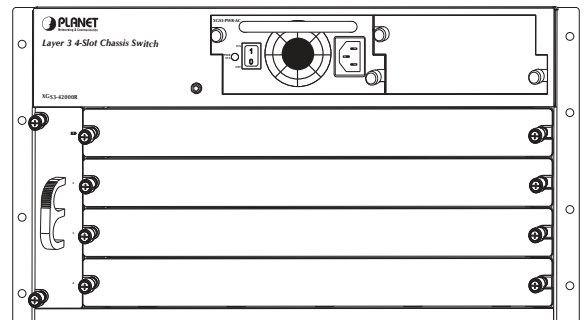


Figure 3. Front panel of XGS3-42000R

To install the XGS3-PWR-AC into the XGS3-42000R, please fasten the screw clockwise after sliding the XGS3-PWR-AC into the XGS3-42000R.



Note

The XGS3-42000R supports hot-swapping and power redundancy backup. This secondary AC power module can directly slide into the chassis while the system is operating.



Caution

Please slide in the XGS3-PWR-AC module first before plugging in the rear power cord.

- 3 -

- 4 -

Layer 3 Chassis Power Supply

XGS3-PWR-AC

www.PLANET.com.tw

500-watt AC power supply for XGS3-42000R



PLANET Technology Corp.

11F., No. 96, Minquan Rd., Xindian Dist., New Taipei City 231, Taiwan



Energy Saving Note of the Device

This power required device does not support Standby mode operation. For energy saving, please remove the DC-plug or push the hardware Power Switch to OFF position to disconnect the device from the power circuit.

Without removing the DC-plug from or switching off the device, the device will still consume power from the power source. In view of Saving the Energy and reducing the unnecessary power consumption, it is strongly suggested to power off or to remove the DC-plug from the device if this device is not intended to be active.

2351-A96090-001

To remove the XGS3-PWR-AC from the XGS3-42000R, please loosen the screws counterclockwise and pull out the XGS3-PWR-AC from the XGS3-42000R.



Note

Please put back the front cover after the XGS3-PWR-AC module is removed.



Caution

Please plug out the power cord before plugging out the XGS3-PWR-AC.

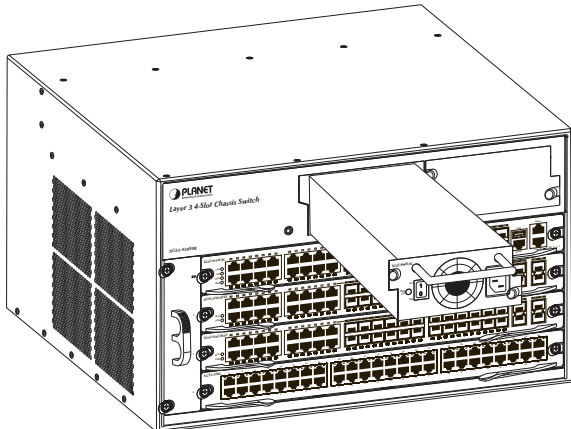


Figure 3. Installing/removing the XGS3-PWR-AC